



## - Installation Manual -

251 311 B22

[Stabilizer / Anti-Sway Bar](#)


<b>[ Part Number ]</b>	251 311 B22
<b>[ Application ]</b>	Nissan Fairlady Z 350Z [Z33] Nissan V35 Skyline [V35]
<b>[ Product ]</b>	Infiniti G35 [V35]
<b>[ Description ]</b>	Stabilizer / Anti-Sway Bar
<b>[ Contents ]</b>	Rear 22mm Sway Bar
	Sway Bar x1
	Installation Manual x1

**NOTE**


Always use a proper vehicle lift when installing Cusco Sway Bars. Always follow OSHA safety standards when working on or under a vehicle.

This installation manual serves as a general guideline for Cusco product install. Please refer to the factory service manual for the proper procedure for sway bar install.

## Factory Sway Bar Removal

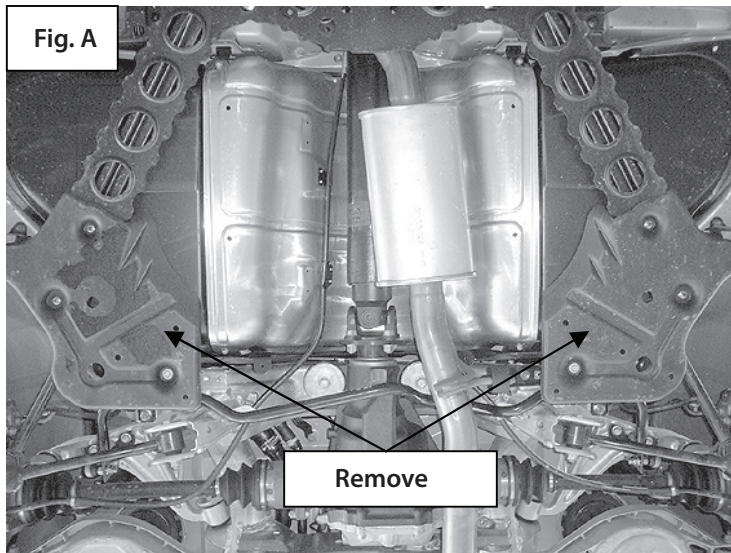

- 1.) Remove the 2 bolts + 1 nut shown in Fig. A to take off the undercover tray. (Both sides)

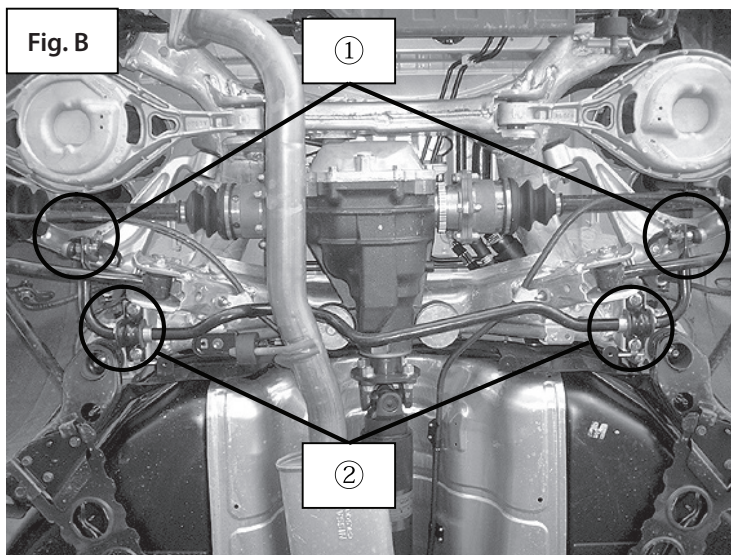

- 2.) Removing the factory sway bar.
  - Remove the nut that is securing the sway bar to the end link. (Both sides) Fig. B #1
  - Remove 2 bolts per bracket to take off the sway bar bracket and bushing. Fig. B #2

## Rear Sway Bar Installation

- 1.) Reuse the factory bushings and the brackets and install in the reverse order the factory sway bar was taken off.

 **Note** Use lubrication if the bushing is difficult to push into the bracket.

\*Periodically inspect and retorque all nuts and bolts after vehicle operation.