
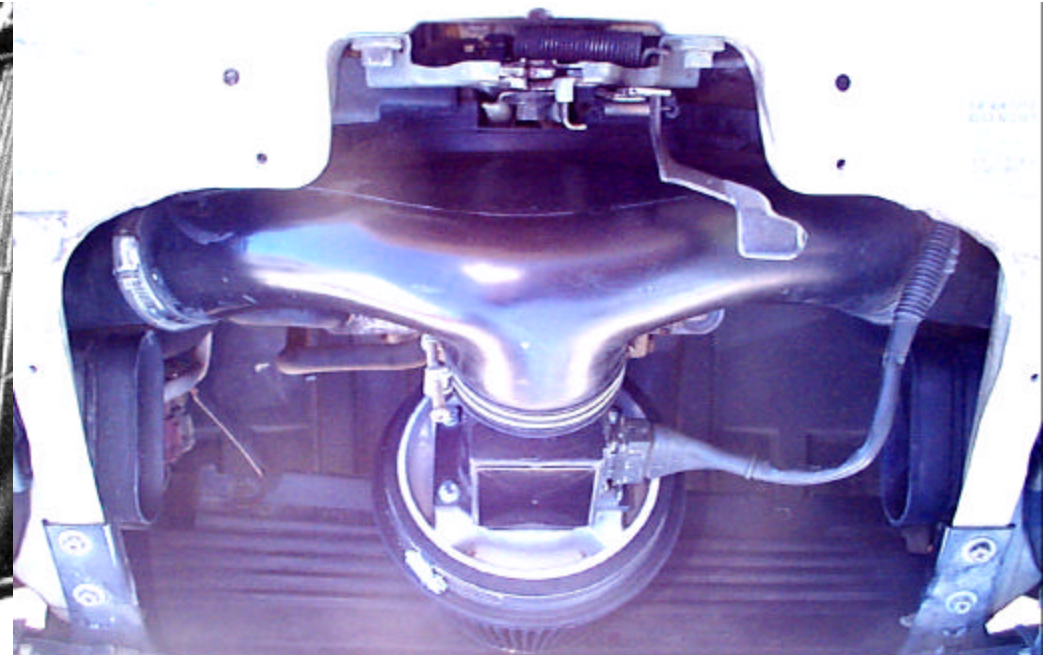


NISSAN 300ZX 1990+
POP CHARGER HIGH FLOW AIR FILTER SYSTEM
INSTALLATION INSTRUCTIONS

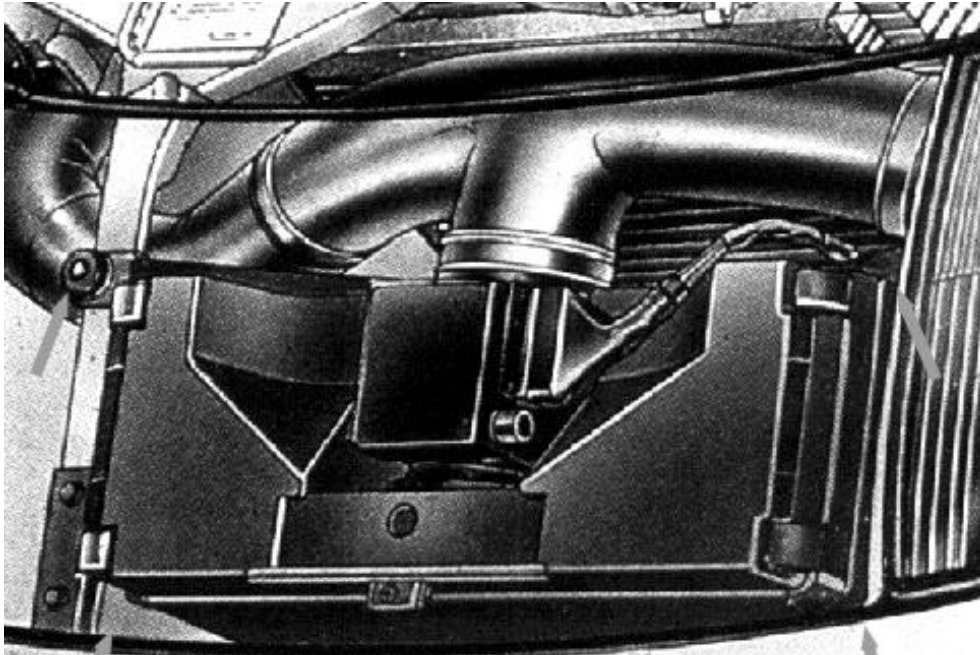

**UNBOLT (4) FRONT AND REAR AIR BOX MOUNTING BOLTS
AND THE DEFLECTOR SHIELD BOLTS (2) LOCATED AT BOTTOM FRONT OF THE AIR BOX**

1. REMOVE BODY PANEL COVERING STOCK AIR CLEANER BOX.
2. LOOSEN THE HOSE CLAMP ON THE AIR FLOW METER AND UNPLUG IT'S ELECTRICAL CONNECTER.
3. CAREFULLY REMOVE THE STOCK AIR CLEANER BOX UPPER SECTION AND FLOW METER FROM THE CAR.
4. REMOVE THE FOUR AIR BOX MOUNTING BOLTS (10 M.M. WRENCH) AND THE BOLTS THAT CONNECT THE AIR BOX TO THE PLASTIC AIR DEFLECTOR SHIELD ON THE BOTTOM.
5. HINT: TO EASILY REMOVE THE LOWER SECTION, BEND THE UNIT SLIGHTLY TOWARDS THE MIDDLE.
6. UNBOLT THE AIR FLOW METER FROM THE AIR BOX AND BOLT IT TO THE SUPPLIED AIR HORN.
7. REINSTALL THE FLOW METER (PROPER POSITIONING OF THE AIR FILTER IS ACCOMPLISHED BY LOOSENING THE TWO OTHER HOSE CLAMPS ON THE RUBBER "T" INLET HOSE AND ROTATING IT UNTIL FILTER IS POINTING TOWARDS THE PLASTIC AIR DEFLECTOR SHIELD).
8. PUNCH HOLE (IT'S VERY THIN) IN PLASTIC AIR DEFLECTOR SHIELD TO RECEIVE STUD ON THE END OF THE AIR FILTER FOR ADDED SUPPORT.
9. CHECK ALL HOSE CLAMPS AND REINSTALL BODY PANEL.

NOTE: Removal of the stock deflector shield will cause air turbulents to adversely effect low speed drivability. Additional shielding is recommended in conditions where excessive amounts of water could enter the system.